







N0303 Signal box tower Pueblo Nuevo - escala N




1. Component parts
2. Painting, weathering, and gluing
3. Assembly manual
4. Main dimensions


N-0303 Signal box tower Pueblo Nuevo - Component parts

N-0303 Puesto de enclavamiento Pueblo Nuevo - Despiece

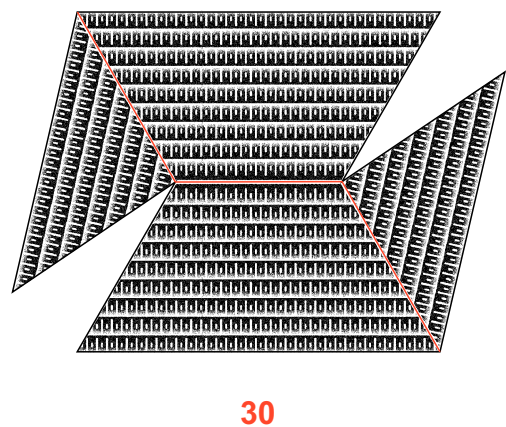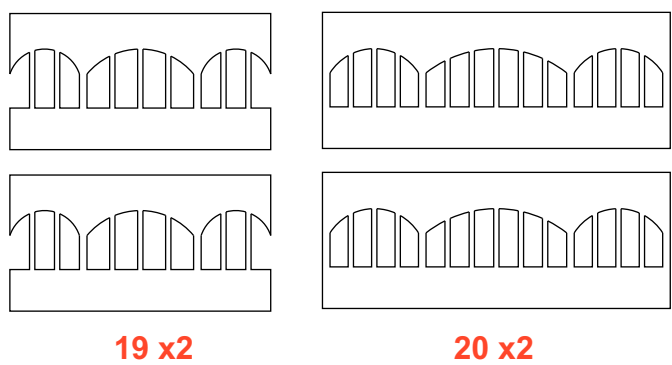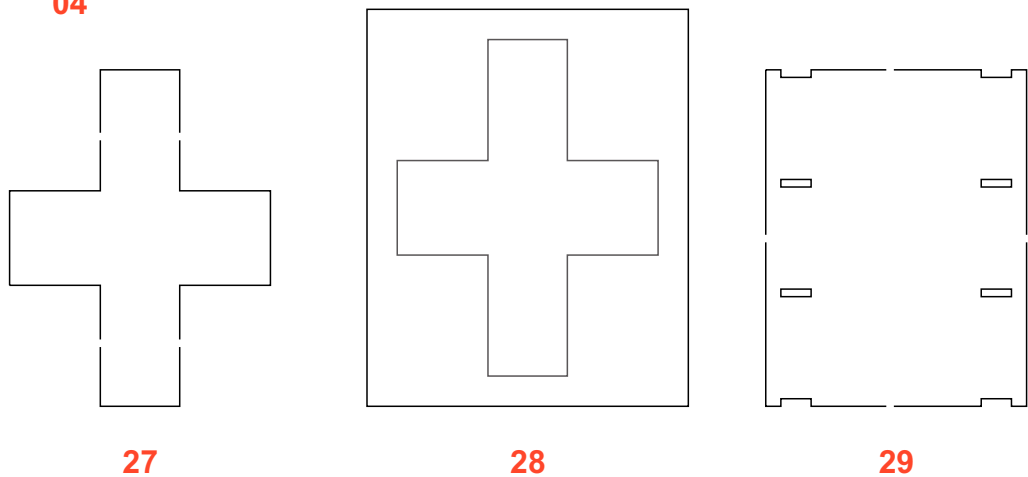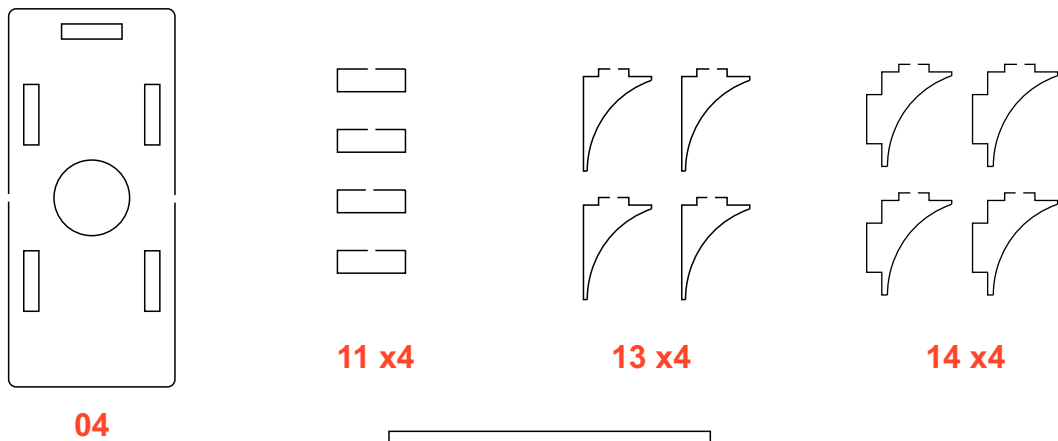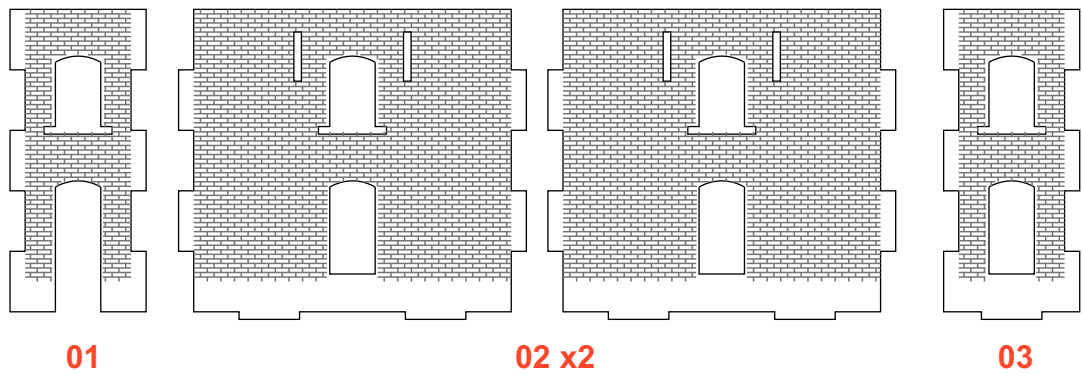





15

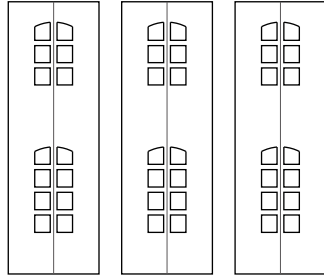


16 x3




31



08 x4




09 x4




10 x4




32

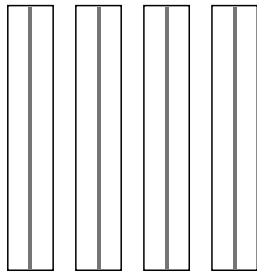


12 x4

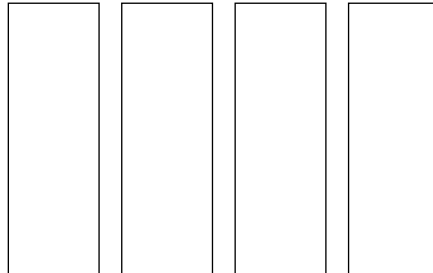


18 x4

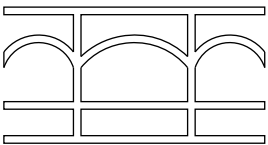


21 x2

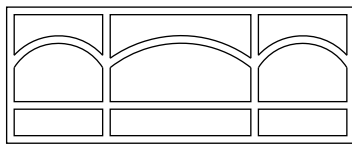






22 x2

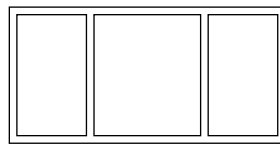





23 x2

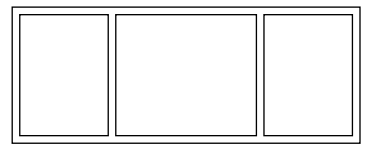

24 x2

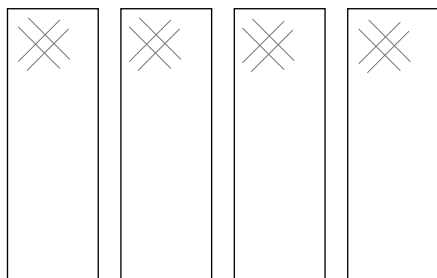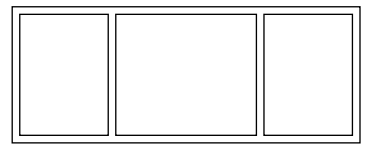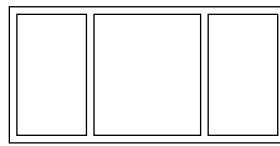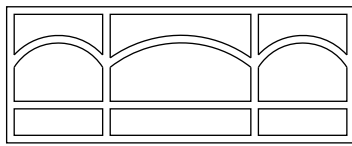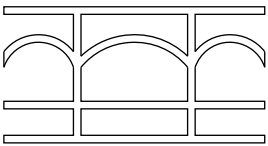

17 x4



25 x2

26 x2

N-0303 Signal box tower Pueblo Nuevo - About painting, weathering and gluing

Painting.

Apply any type of paint (acrylic or plastic).

Use any painting technique: airbrush, brush or spray, although some touch-ups should be done with a brush. No primer is necessary, although we recommend applying some kind of filler or sealer on the edges of the thicker boards (1 and 2 mm), as they are very absorbent.

The colours used in this kit are the following:

- Dark red for the main exterior walls.
- Dark green for the signal box cabin.
- Off-white for all architectural finishes (cornices, frames, etc).
- Tile orange for the roof.
- Light or dark grey for the base of the signal box and the cabin floor.

We recommend painting all parts before assembly.

Weathering.

Weathering at the end of mounting, preferably with pigments.

Adhesive.

The best adhesive to assemble this kit is white carpenter's glue, also known as white glue.

Do not use school white glue as it is too slow to work quickly because it is acrylic.

A good adhesive with an excellent applicator is FALLER expert lasercut 170494 (tm).

N-0303 Puesto de enclavamiento Pueblo Nuevo - Pintura, envejecido y adhesivo.

Pintura.

Aplicar pintura de cualquier tipo (acrílica o plástica).

Utilizar cualquier técnica de pintura: aerógrafo, pincel o spray, a pesar de que algunos retoques deben realizarse con pincel.

No es necesario imprimación, aunque recomendamos aplicar algún tipo de tapaporos o selladora en los cantos de los cartones más gruesos (1 y 2 mm), dado que son muy absorbentes.

Los colores utilizados en este kit son los siguientes:

- Rojo oscuro en las paredes principales exteriores.
- Verde oscuro para la cabina del enclavamiento
- Blanco hueso en todos los remates arquitectónicos (cornisas, marcos, etc).
- Naranja teja para la cubierta.
- Gris claro u oscuro para la base del enclavamiento y el piso de la cabina

Recomendamos pintar todas las piezas antes de proceder al montaje.

Envejecido.

Envejecer al final del montaje, preferiblemente con pigmentos. Si realiza aguadas que sea con moderación ya que el cartón, especialmente los finos, se reblandecen con facilidad.




Adhesivo.


El mejor adhesivo para montar este kit es la cola blanca de carpintero, de la llamada rápida, también conocido como cola blanca. No utilizar cola blanca de uso escolar ya que al ser acrílica es demasiado lenta para proceder con agilidad.

Un buen adhesivo con un excelente aplicador puede ser FALLER expert lasercut 170494 (tm)

N-0303 Signal box tower Pueblo Nuevo - Assembly manual.



N-0303 Puesto de enclavamiento Pueblo Nuevo - Manual de montaje.

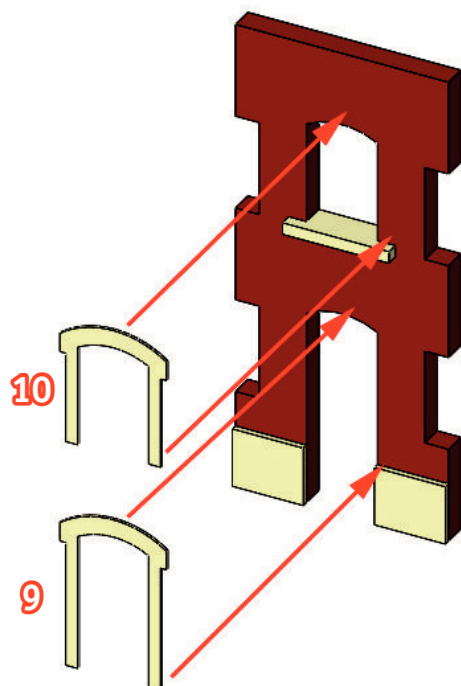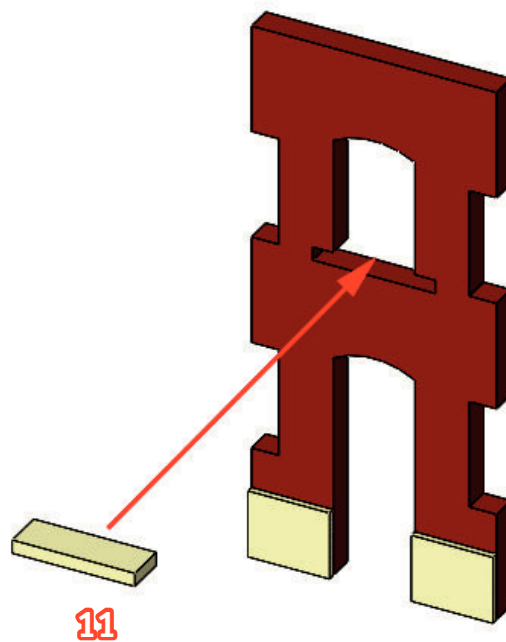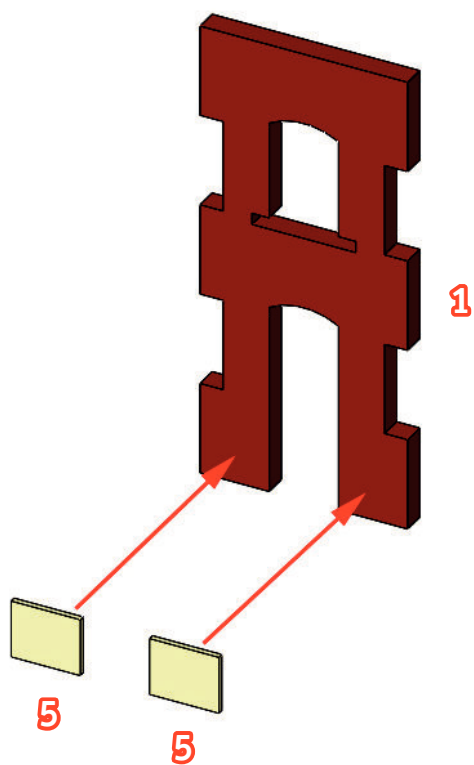

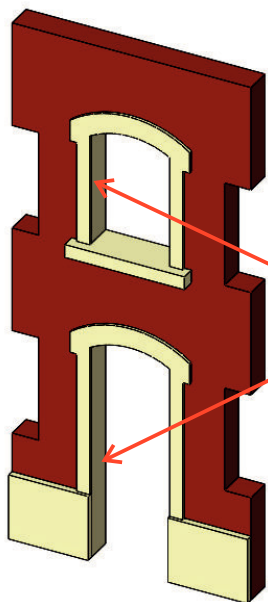




Paint inside edges of door and window, with a paintbrush


Pintar cantos interiores de puerta y ventana, a pincel

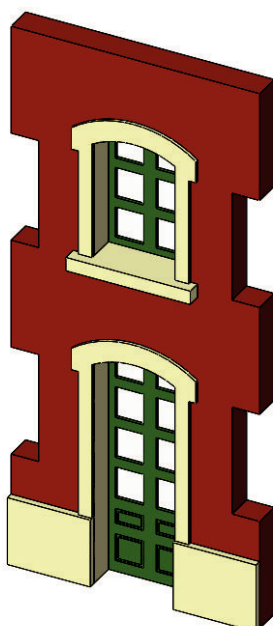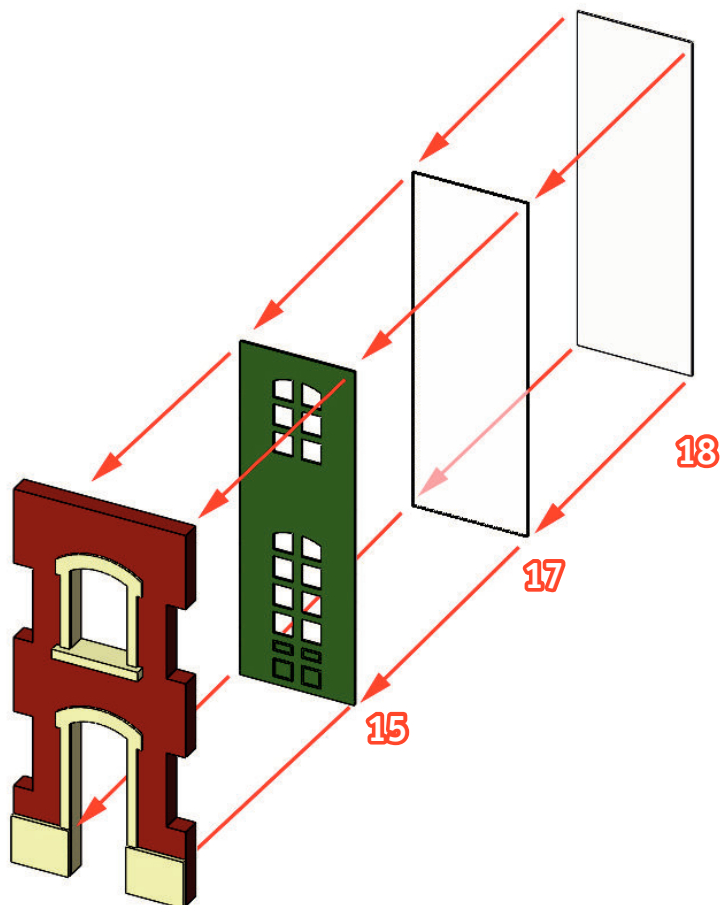

Finished front façade



Fachada delantera terminada

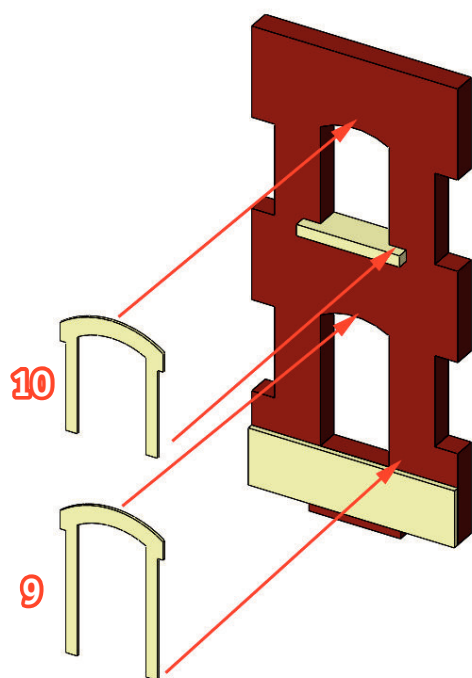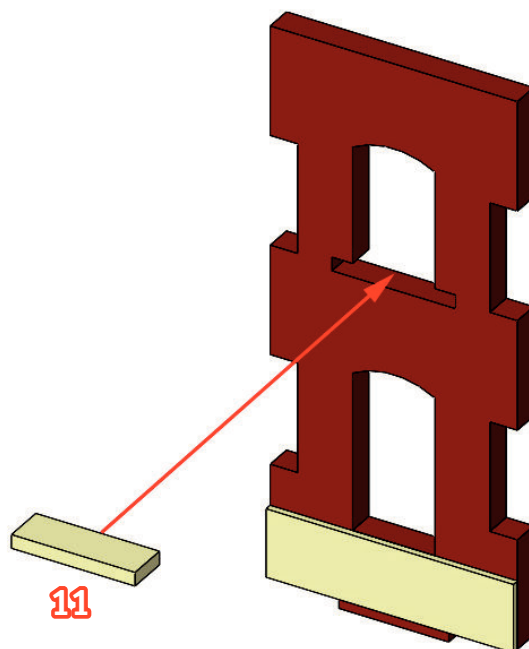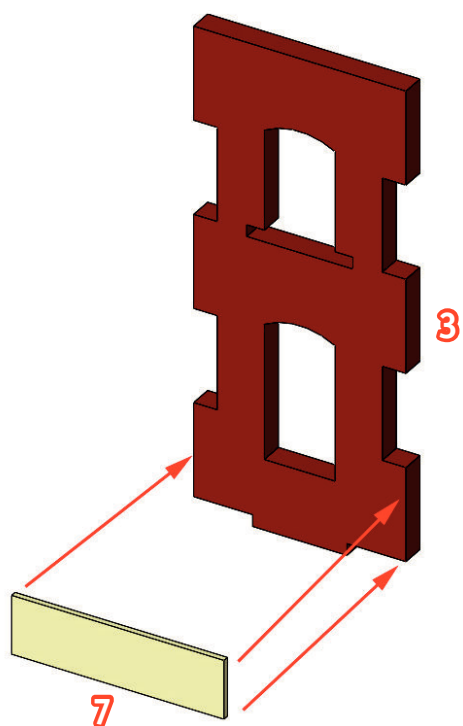

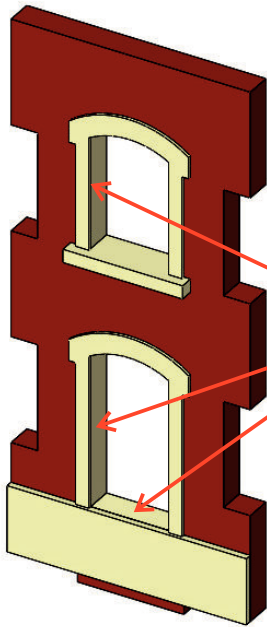


Painting the inside edges of windows, with a brush

Pintar cantos interiores de ventanas, a pincel

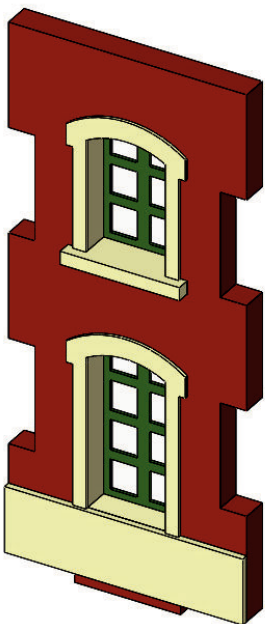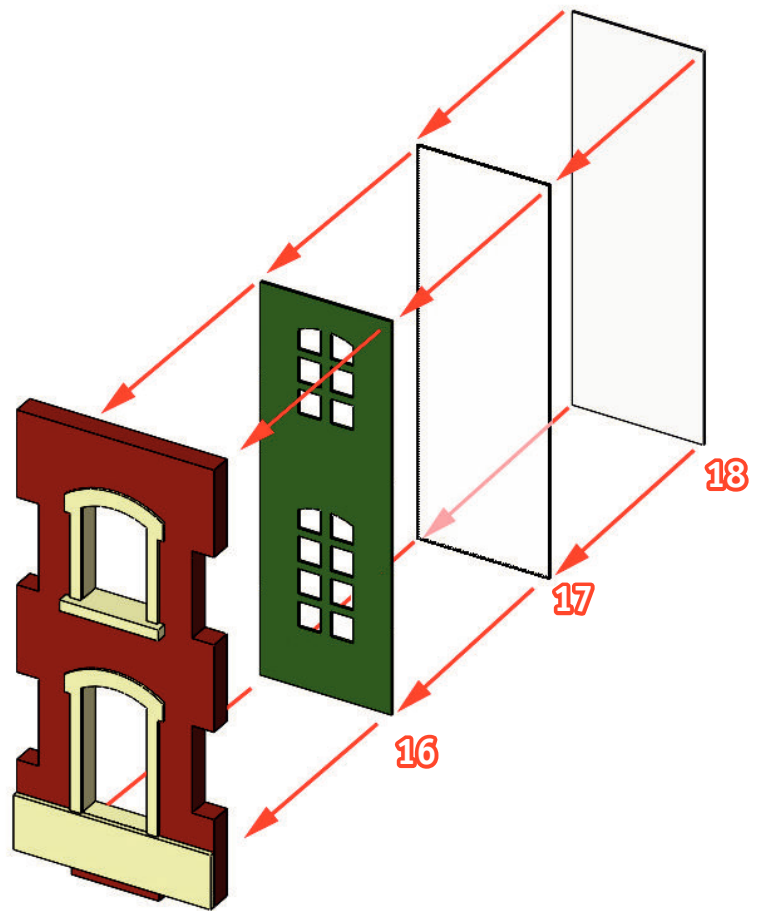


Finished rear facade


Fachada trasera terminada

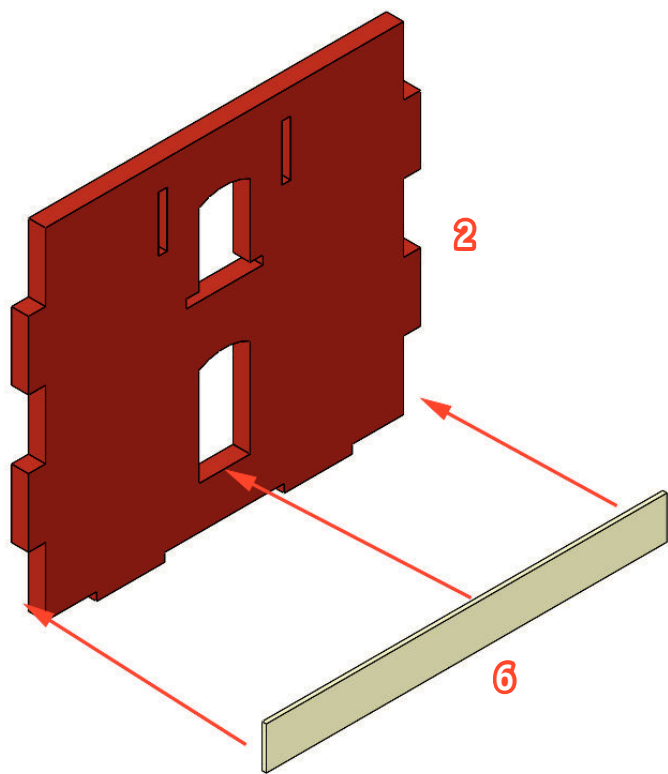


x2

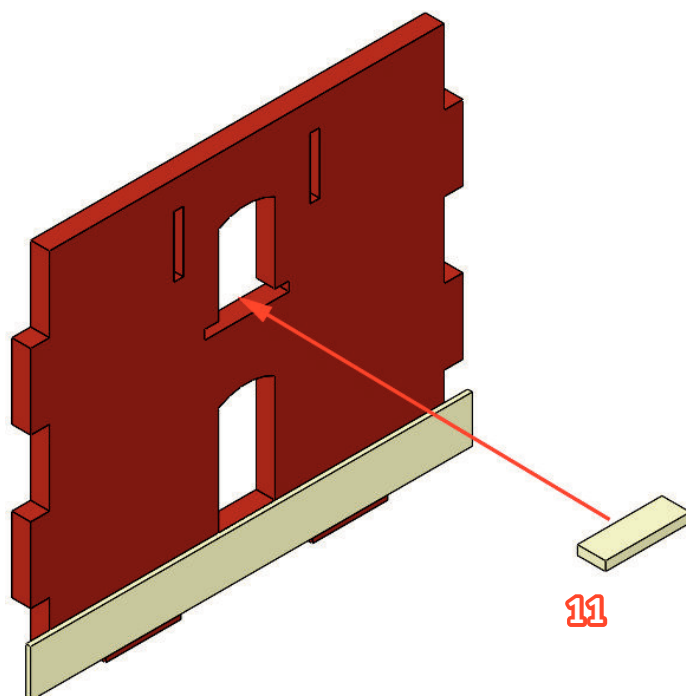

11

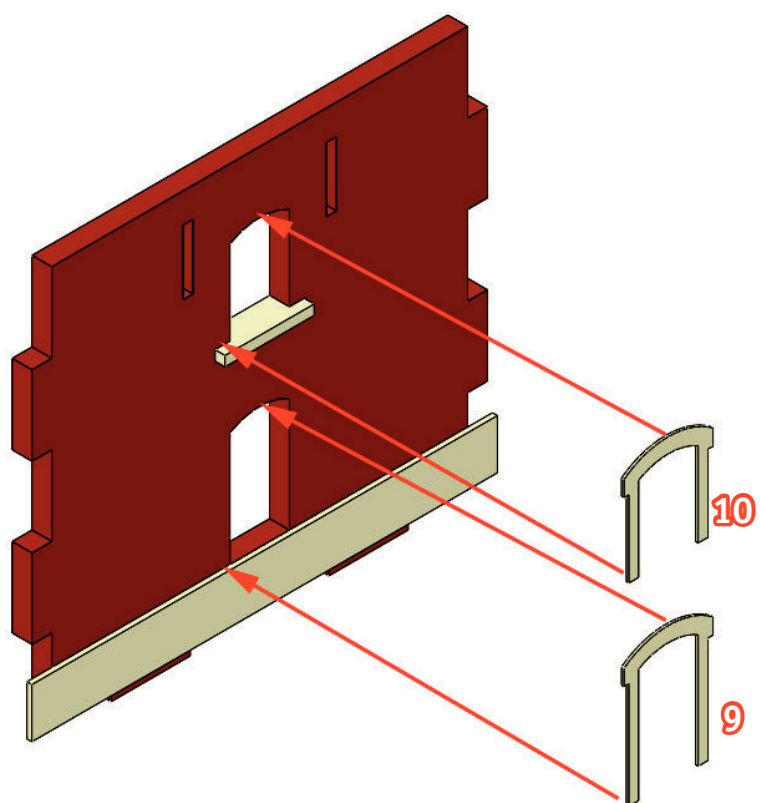




x2

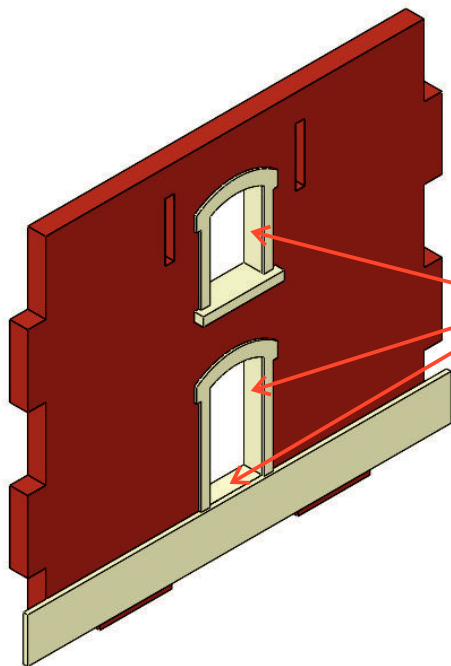

x2








Painting the inside edges of windows, with a brush




Pintar cantos interiores de ventanas, a pincel

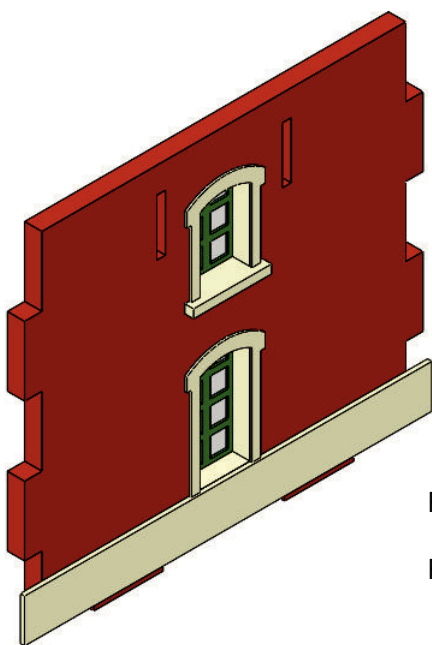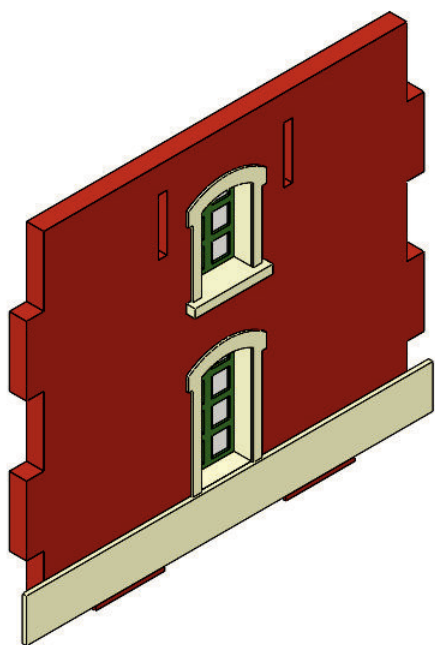
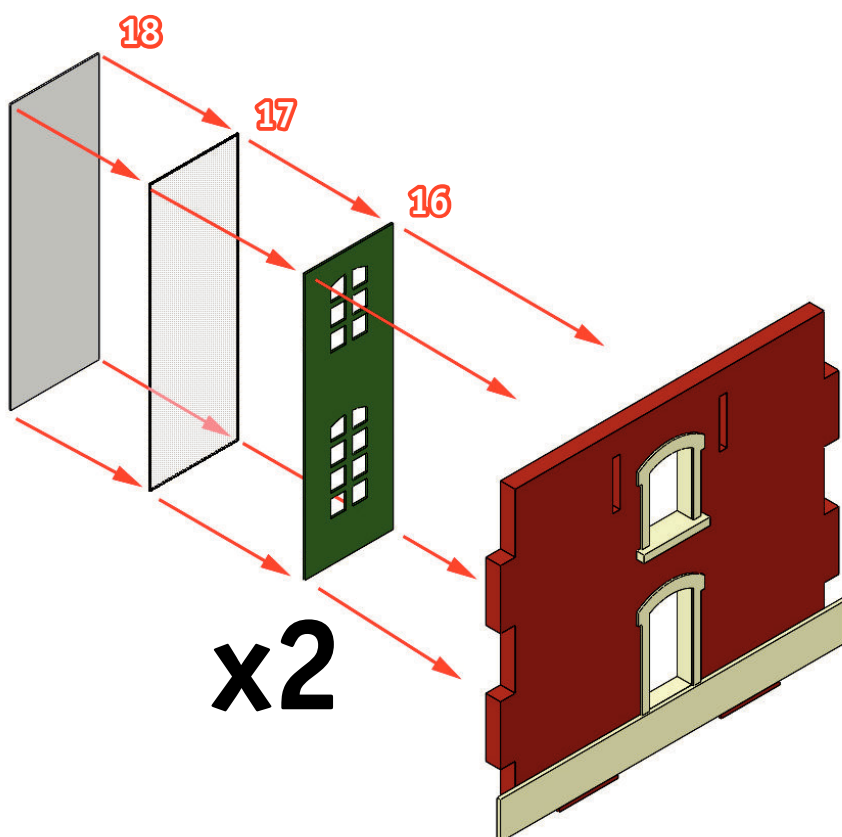





Finished side facades




Fachadas laterales terminadas


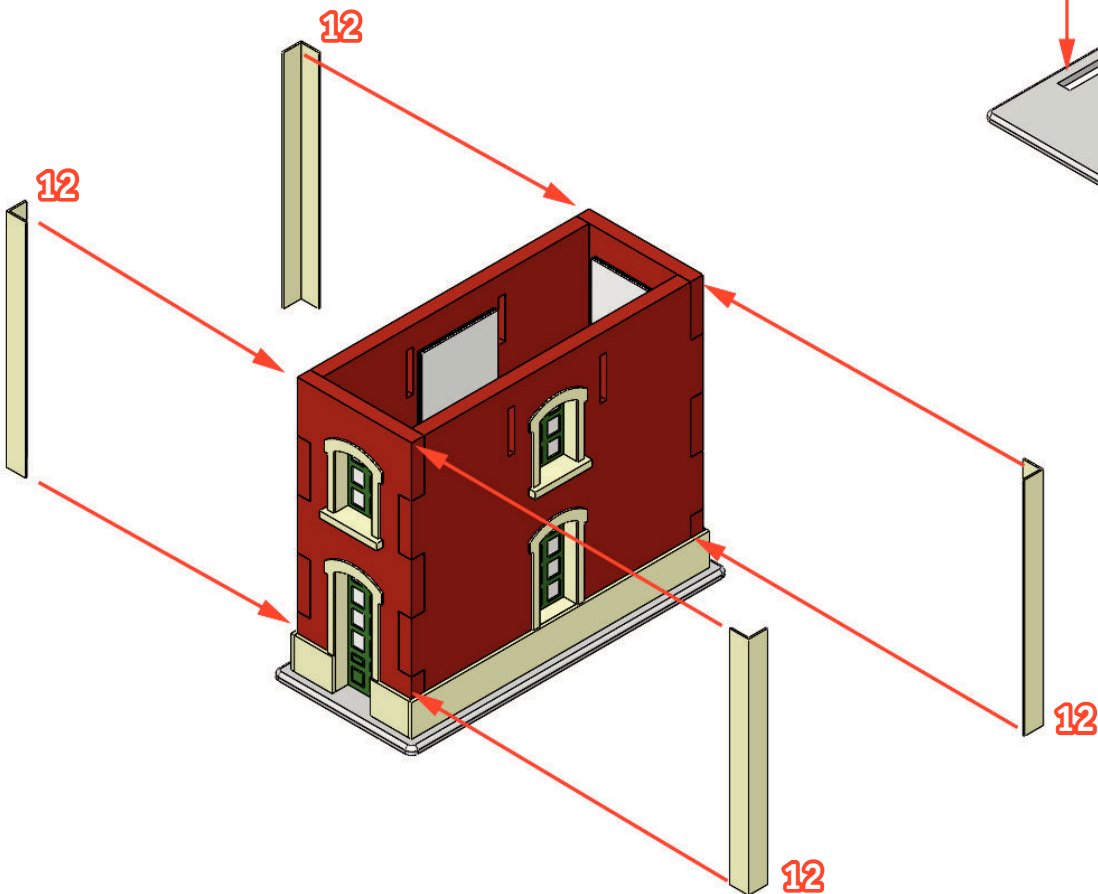
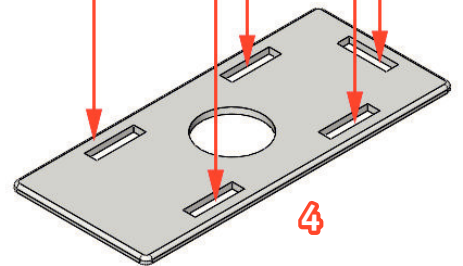
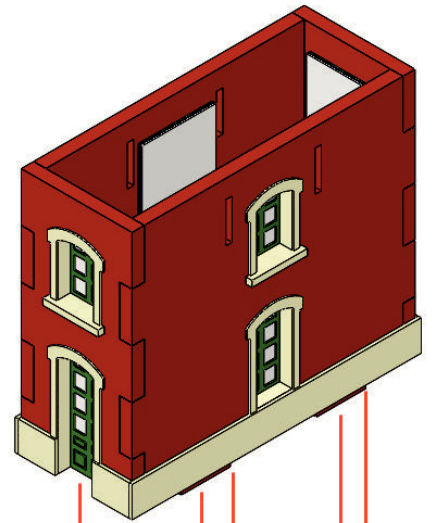
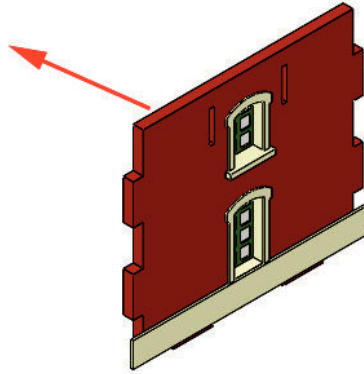
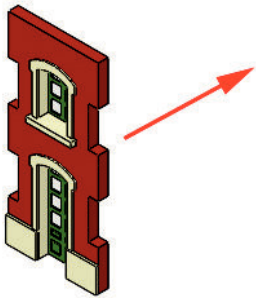
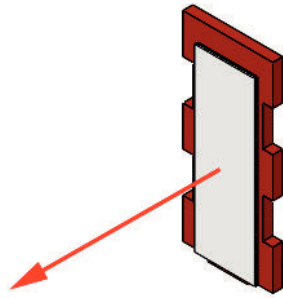
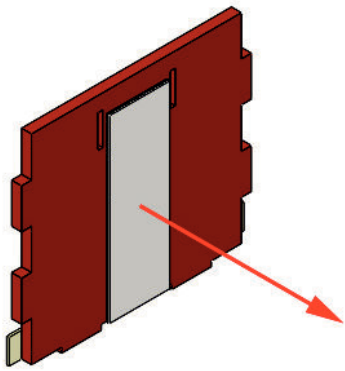


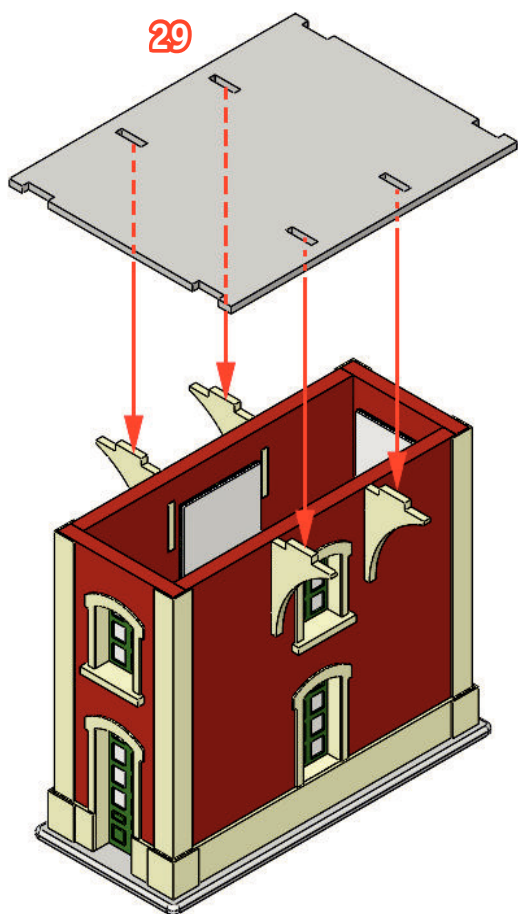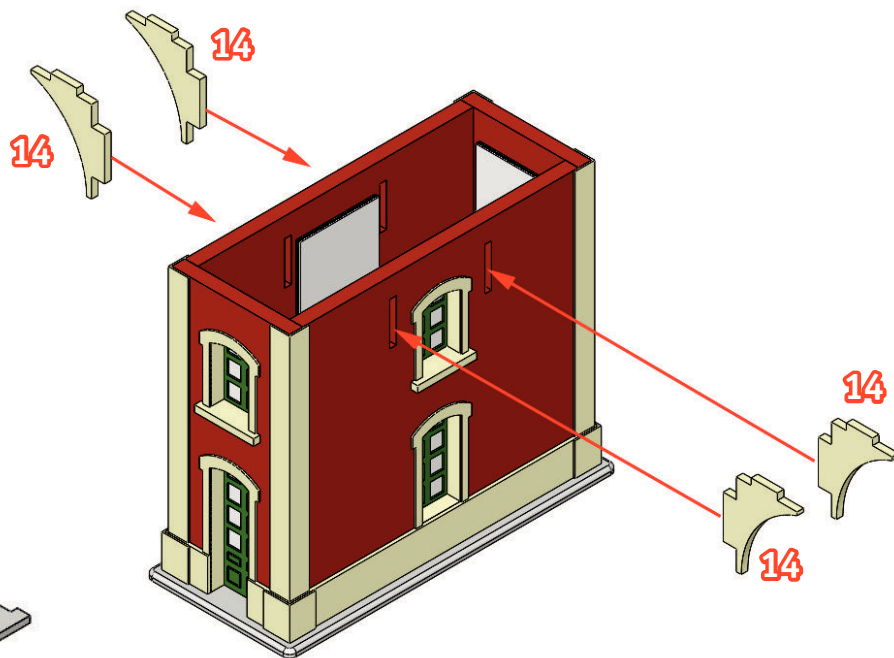
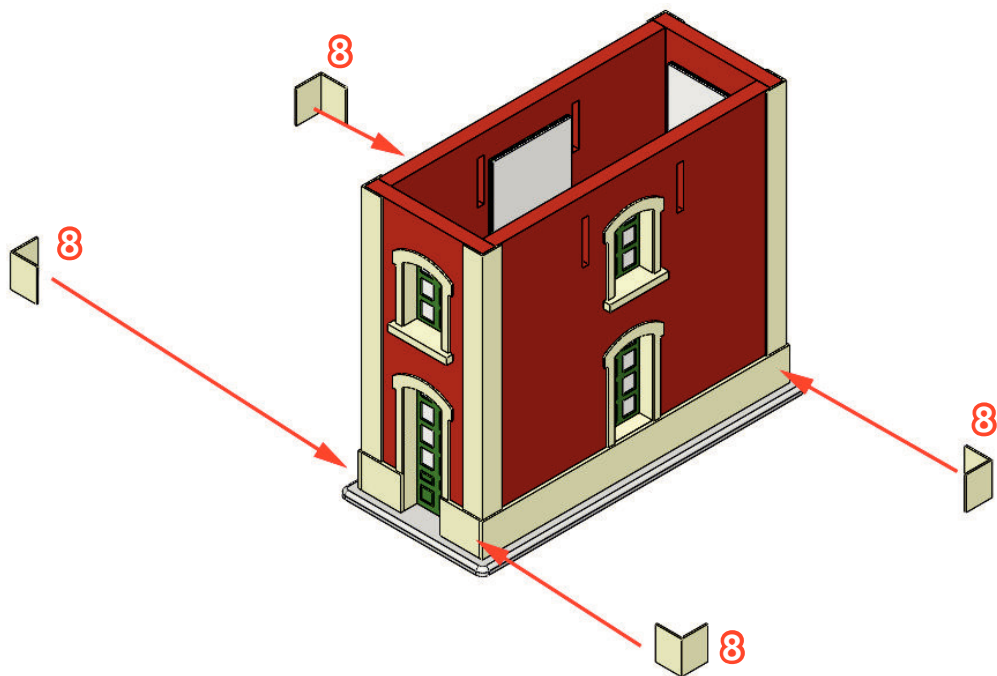


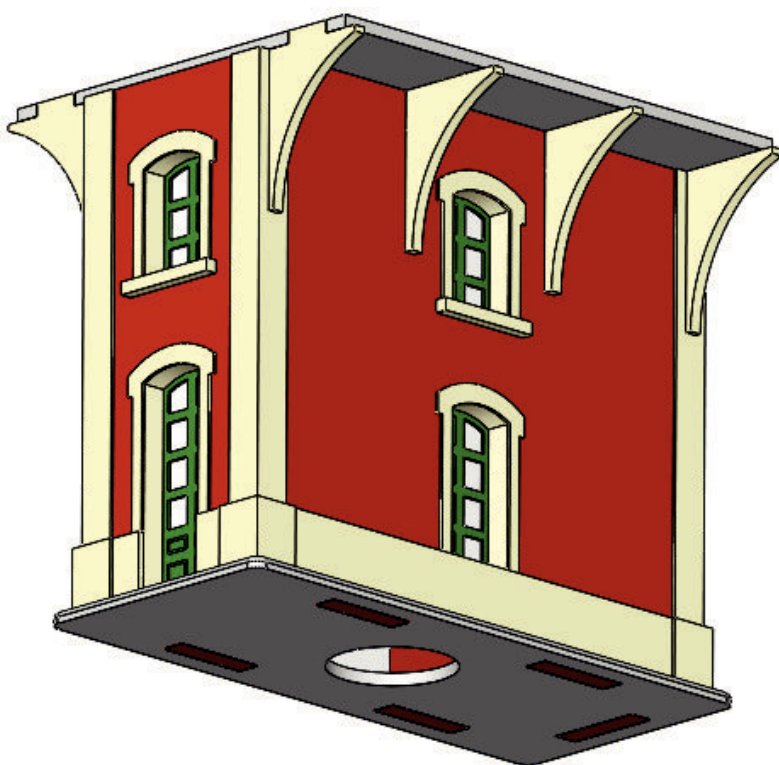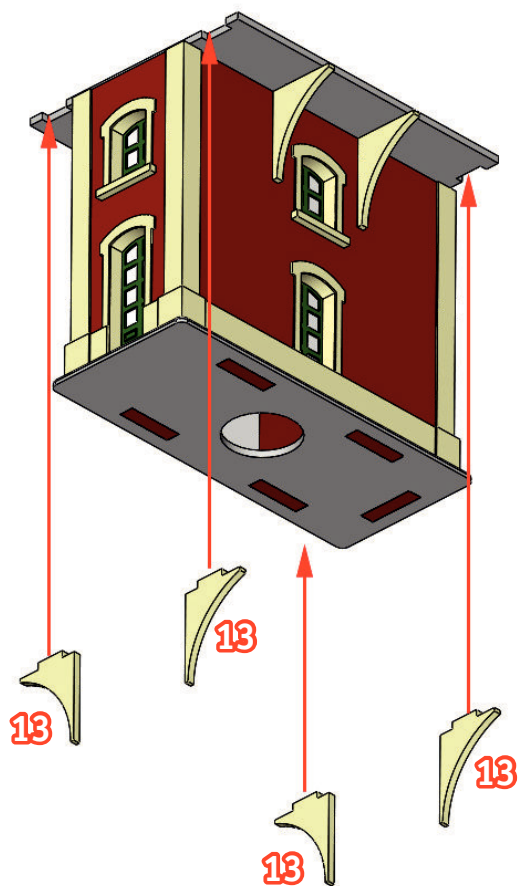

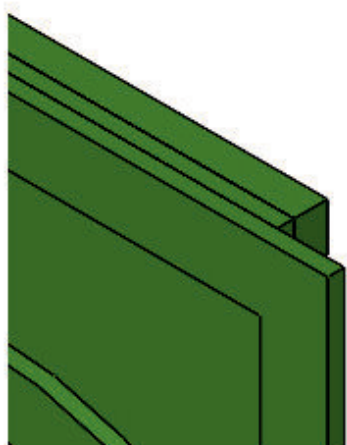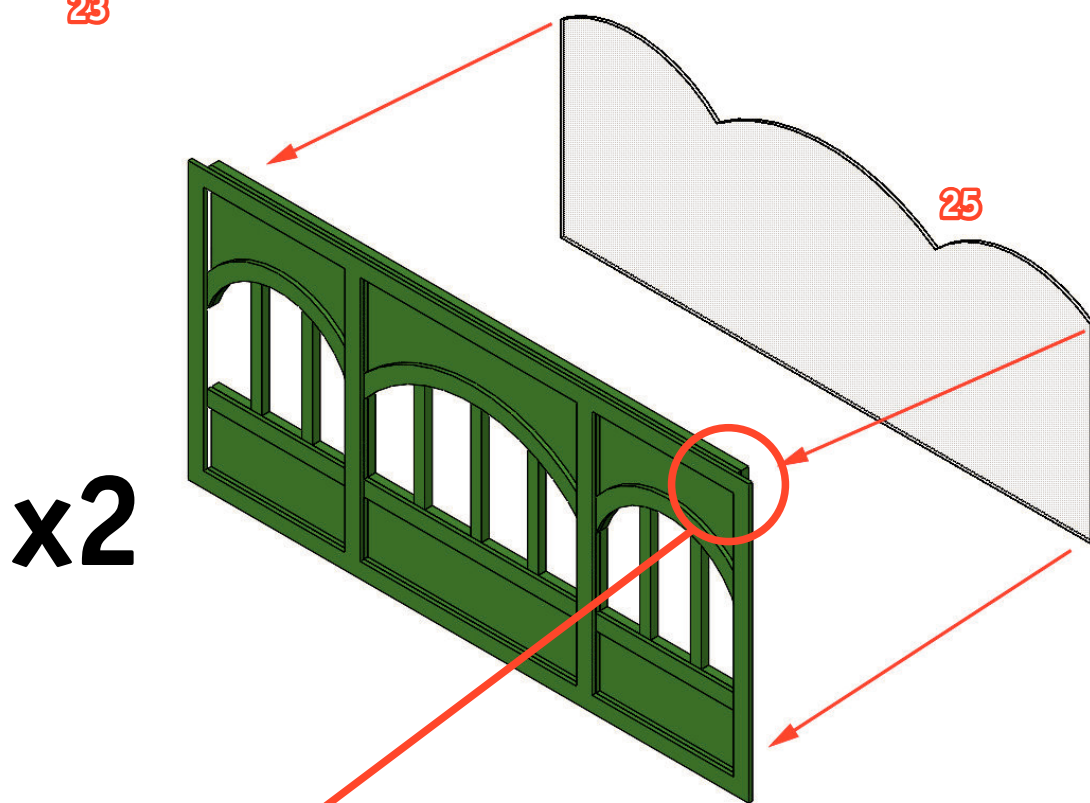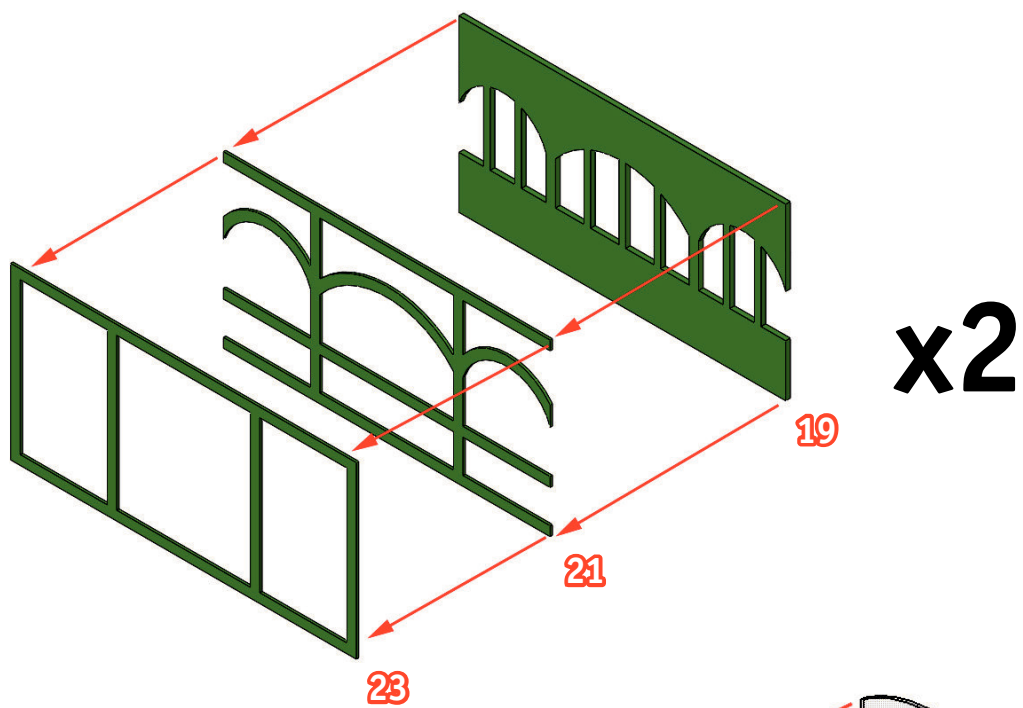


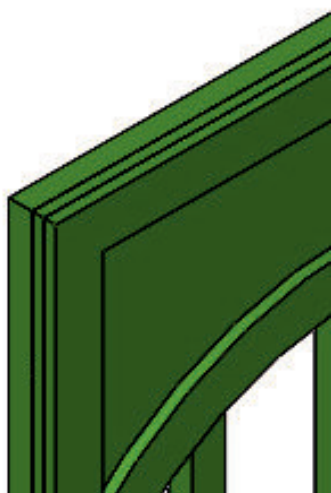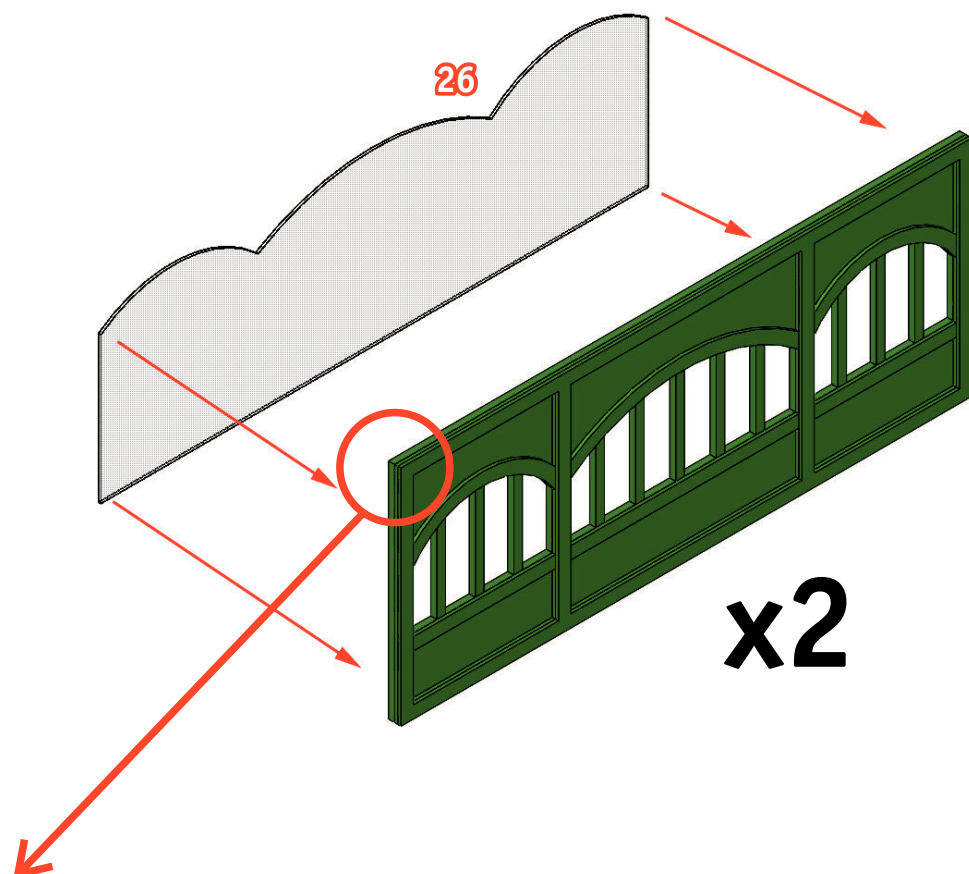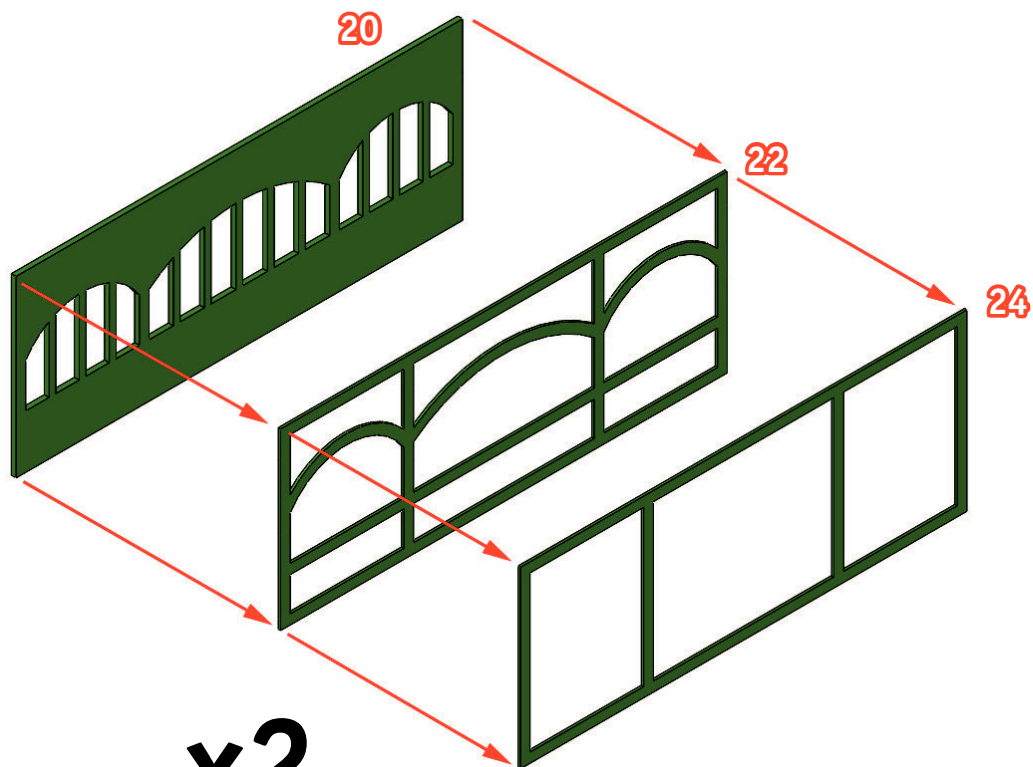

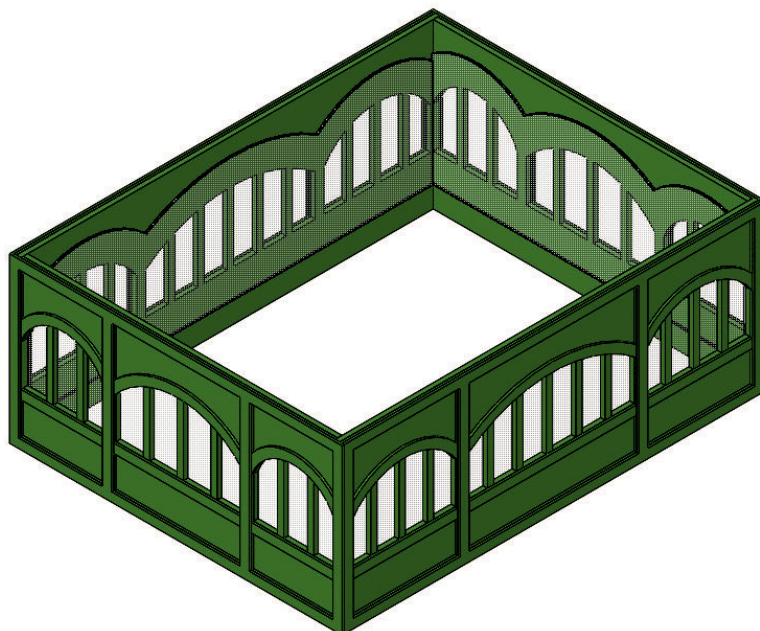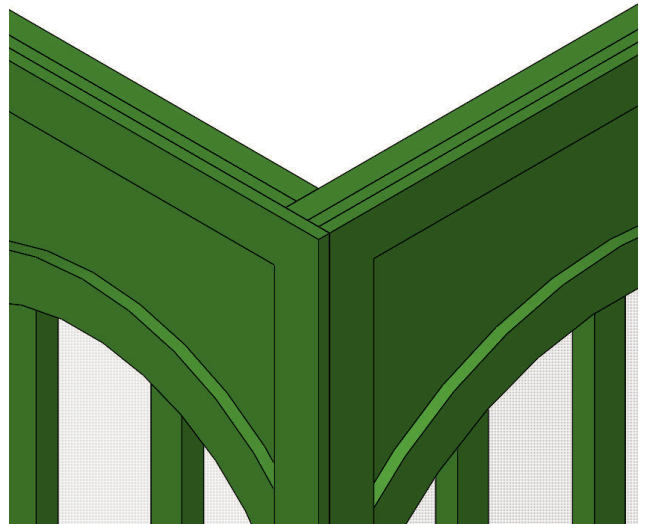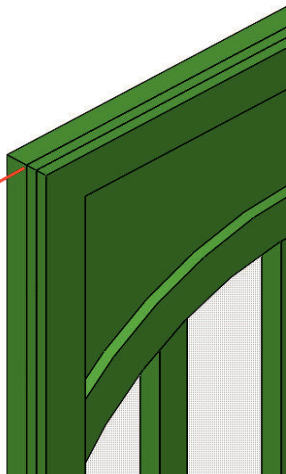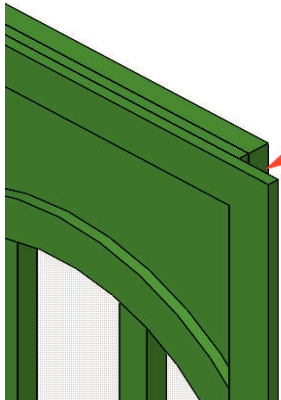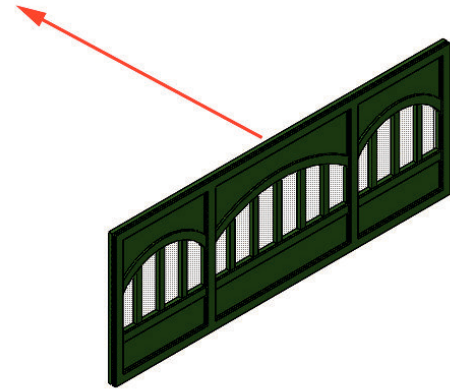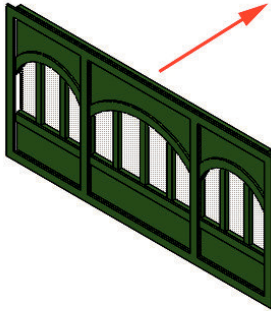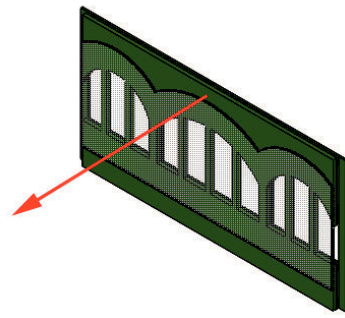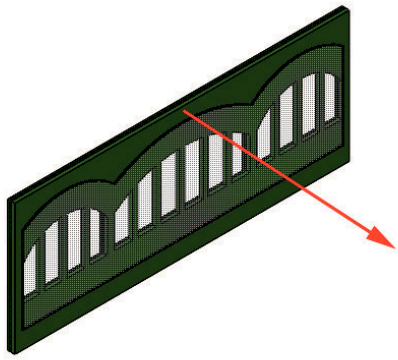


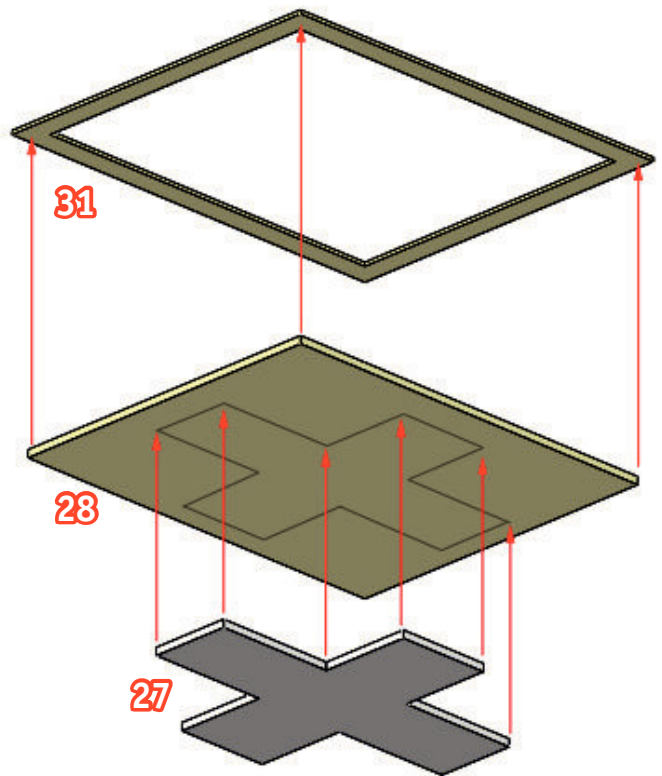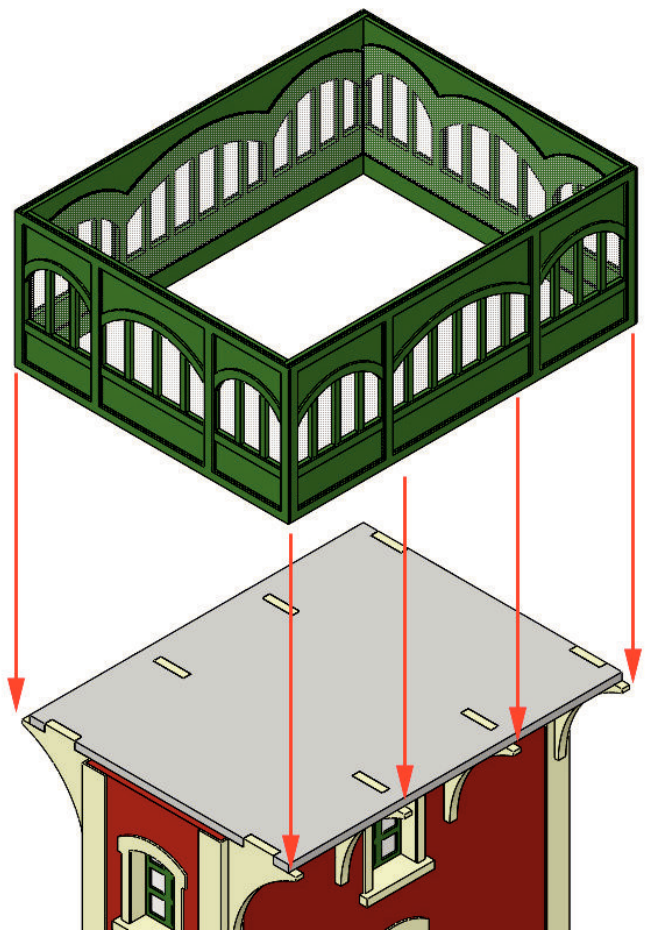



Bottom view 11
; Vista inferior !

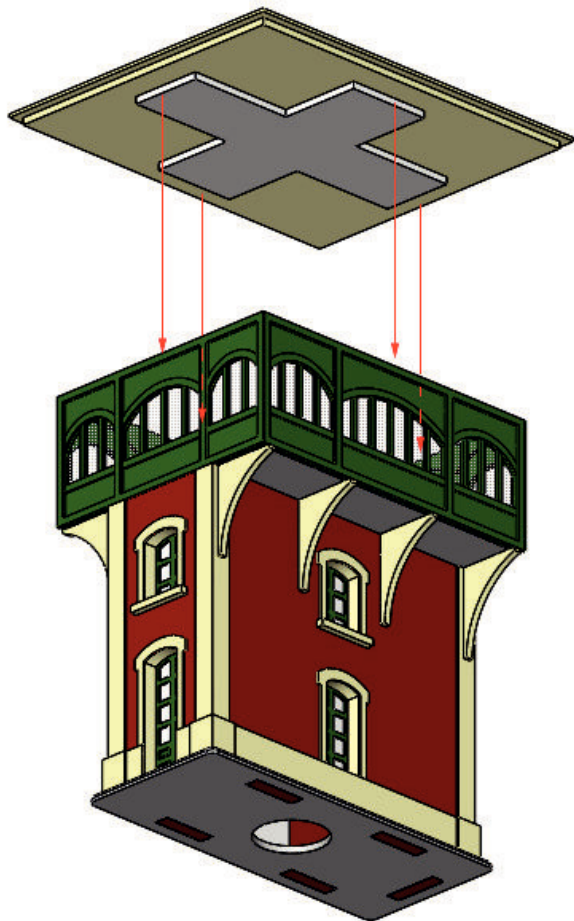

Bottom view
Vista inferior

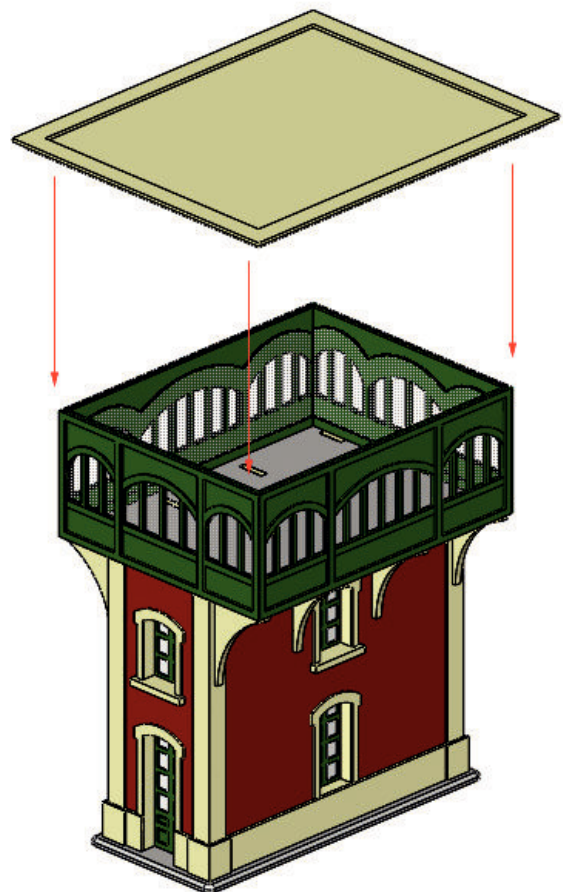

Top view
Vista superior

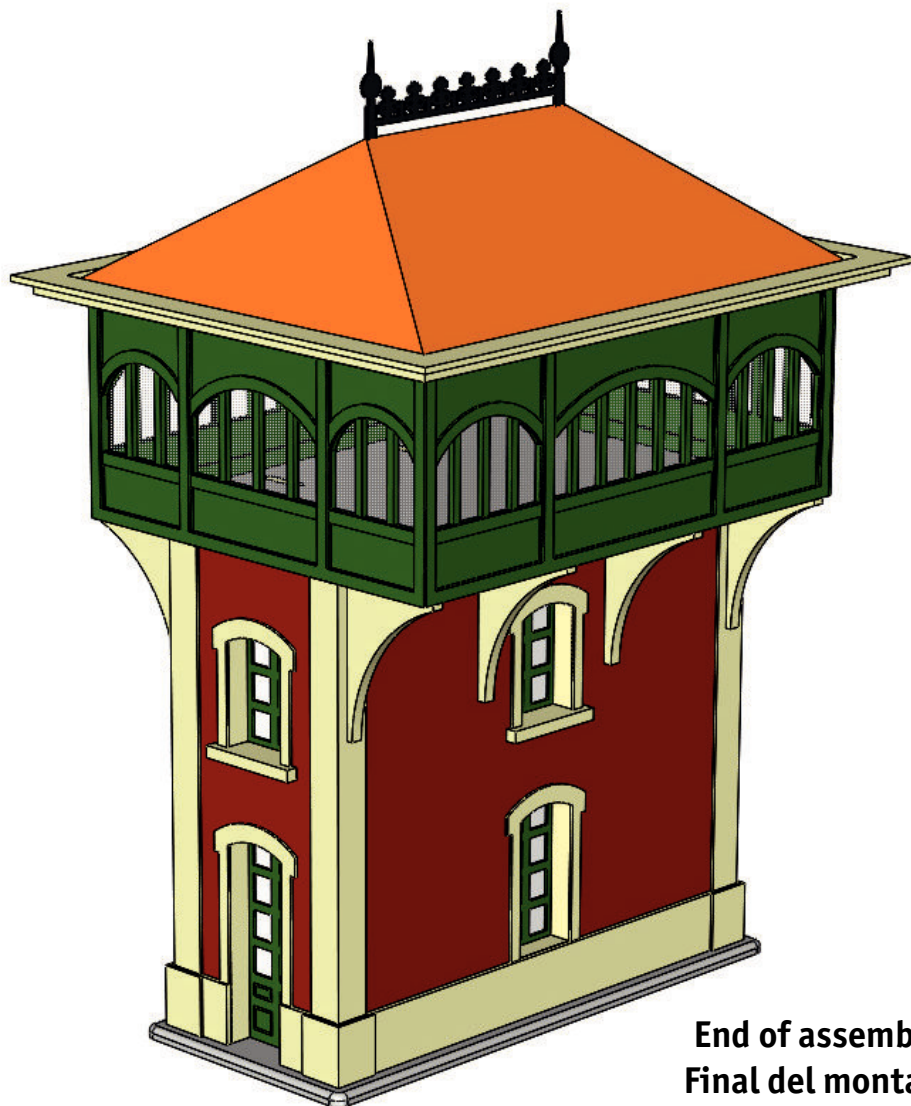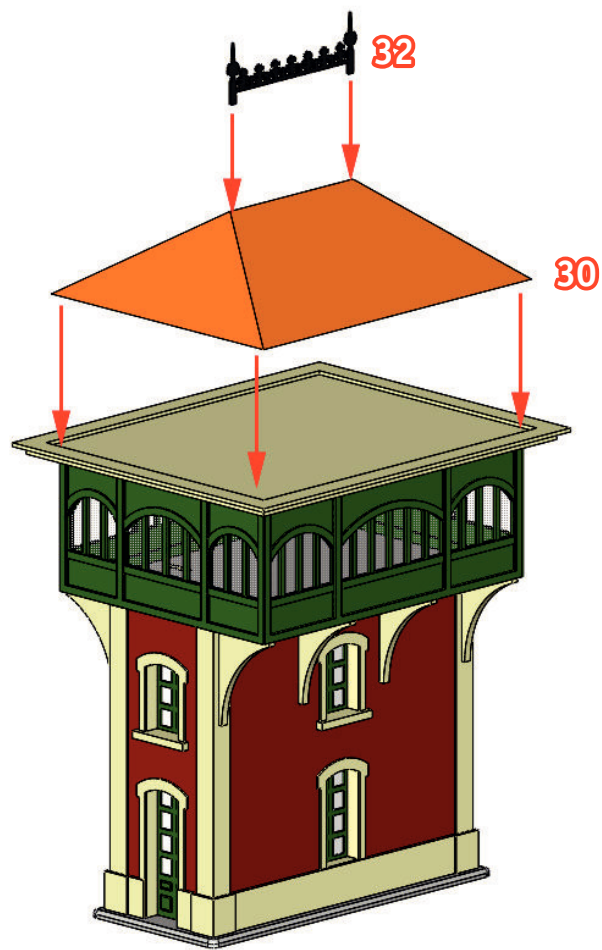

End of assembly
Final del montaje

N-0303 Signal box tower Pueblo Nuevo - Main dimensions

N-0303 Puesto de enclavamiento Pueblo Nuevo - Principales medidas

